

1. Contents

1.	Contents	2
2.	Key to symbols	2
3.	General safety instructions	2
4.	Overview of products	3
5.	Installation	8
6.	Initial Operation	10
7.	Emergency operation	15
8.	Maintenance	17
9.	Technical data	18
10.	EU Declaration of Conformity	21

2. Key to symbols



Danger of personal injury!
The safety instructions must be observed!



Warning! Danger to property!
The safety instructions must be observed!



Information
Special information
OR
Reference to other sources of information

3. General safety instructions

Guarantee

The function and safety of the equipment is only guaranteed if the warning and safety instructions included in these operating instructions are adhered to.

Ovitor Oy is not liable for any personal injury or damage to property that occurs as a result of the warning and safety instructions being disregarded. **Ovitor Oy** does not accept any liability or warranty for damage due to the use of non-approved spare parts and accessories.

Using the equipment for its intended purpose

The operators of the STA 1 range are designed exclusively for opening and closing weight counterbalanced sectional doors.

Target group

Only qualified and trained specialists are permitted to install and service the operator. Qualified and trained professionals fulfil the following requirements:

- knowledge of the general and specific safety and accident prevention regulations,
- Knowledge of the relevant regulations,
- trained in the use and care of appropriate safety equipment,
- Capable of recognising the dangers associated with installation.

Only qualified and trained electricians may connect, programme and service the controls.

Qualified and trained electricians meet the following requirements:

- knowledge of the general and specific safety and accident prevention regulations,
- knowledge of the relevant electrical regulations,
- trained in the use and care of appropriate safety equipment,
- capable of recognising the dangers associated with electricity.

Instructions for installation and connection

- The controls must be disconnected from the electricity supply before carrying out electrical works. It must be ensured that the electricity supply remains disconnected during the works.
- Local protective regulations must be complied with.
- Mains cables and control cables must be laid separately.

4. Overview of products

GB

Regulations and bases for testing

For connecting, programming and servicing, the following regulations must be observed (the list is not exhaustive).

Construction product standards

- EN 13241-1 (Products without fire resistance or smoke control characteristics)
- EN 12445 (Safety in use of power operated doors - Test methods)
- EN 12453 (Safety in use of power operated doors - Requirements)
- EN 12635 (Industrial, commercial and garage doors and gates - Installation and use.)
- EN 12978 (Safety devices for power operated doors and gates - Requirements and test methods)

Electromagnetic compatibility

- EN 55014-1 (Radio disturbance, household appliances)
- EN 61000-3-2 (Disturbances in supply systems - harmonic currents)
- EN 61000-3-3 (Disturbances in supply systems - voltage fluctuations)
- EN 61000-6-2 (Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments)
- EN 61000-6-3 (Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments)

Machinery guidelines

- EN 60204-1 (Safety of machinery, electrical equipment of machines, part 1: general requirements)
- EN 12100-1 (Safety of machinery. Basic concepts, general principles for design. Basic terminology, methodology)

Low voltage

- EN 60335-1 (Household and similar electrical appliances - Safety)
- EN 60335-2-103 (Particular requirements for drives for gates, doors and windows)

Professional association (D)

- BGR 232 (Directive for Power-driven Windows, Doors and Gates)

4.1 Various options

The following package options are available for the STA1 operator:

- STA/STAW 1 E (external control unit with release mechanism)
- STA/STAW 1 KE (external control unit with chain)
- STA/STAW 1 KU (external control unit with emergency hand crank)




- STA/STAW 1 E - 100% ED (external control unit with release mechanism, 100% duty cycle)
- STA/STAW 1 KE - 100% duty cycle (external control unit with chain, 100% duty cycle)
- STA/STAW 1 KU - 100% duty cycle (external control unit with emergency hand crank, 100% duty cycle)

- STAC 1 E (integrated control unit with release mechanism)
- STAC 1 KE (integrated control unit with chain)
- STAC 1 KU (integrated control unit with emergency hand crank)



4. Overview of products



4.2 Overview

STA/STAW 1 E

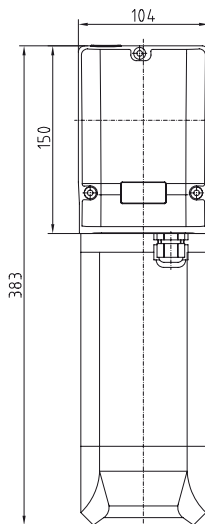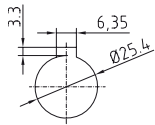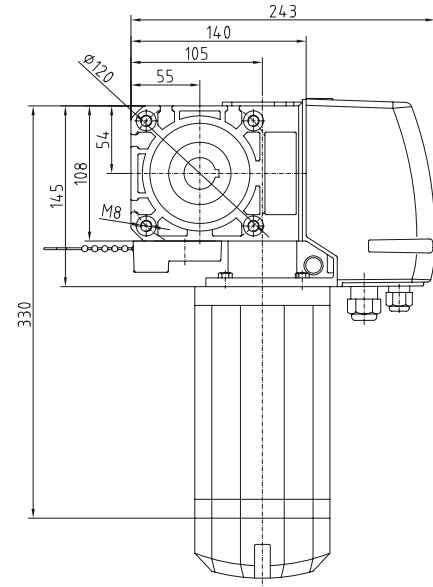


STA/STAW 1 KE

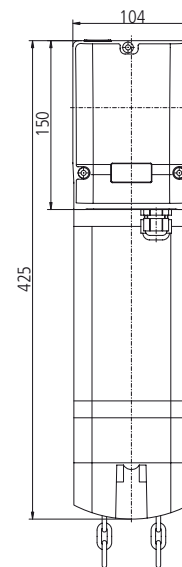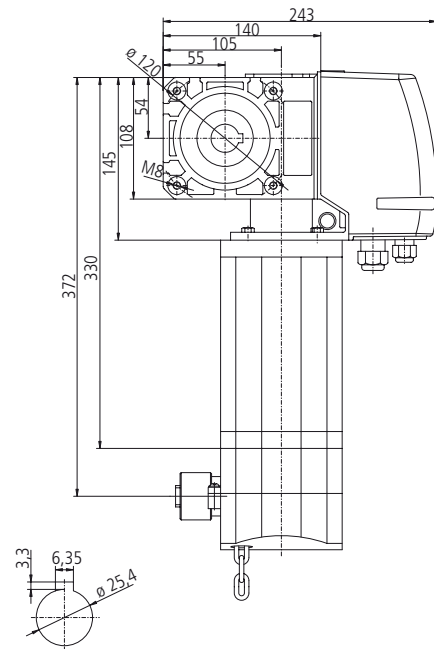

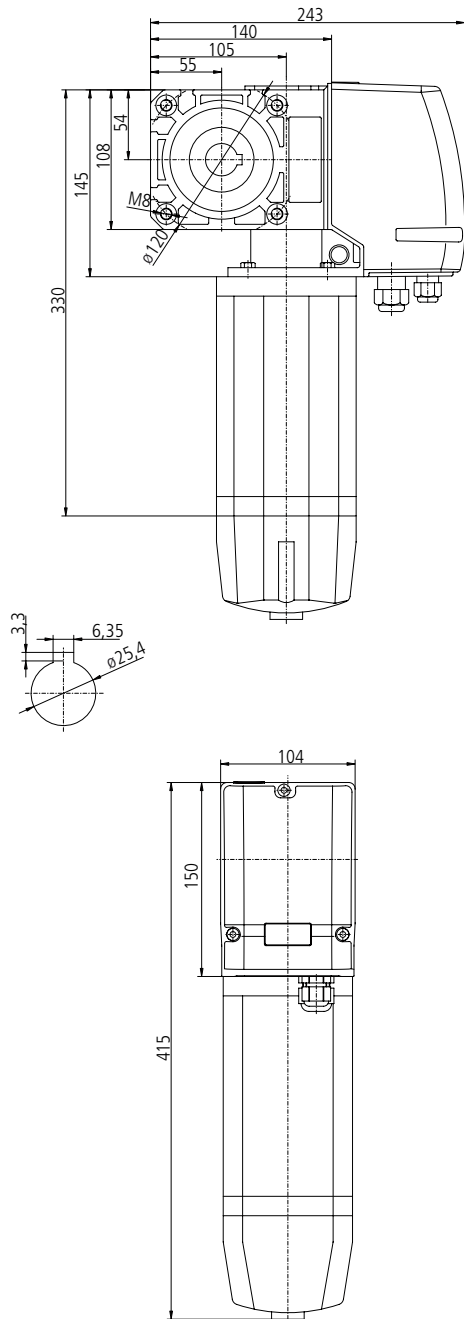
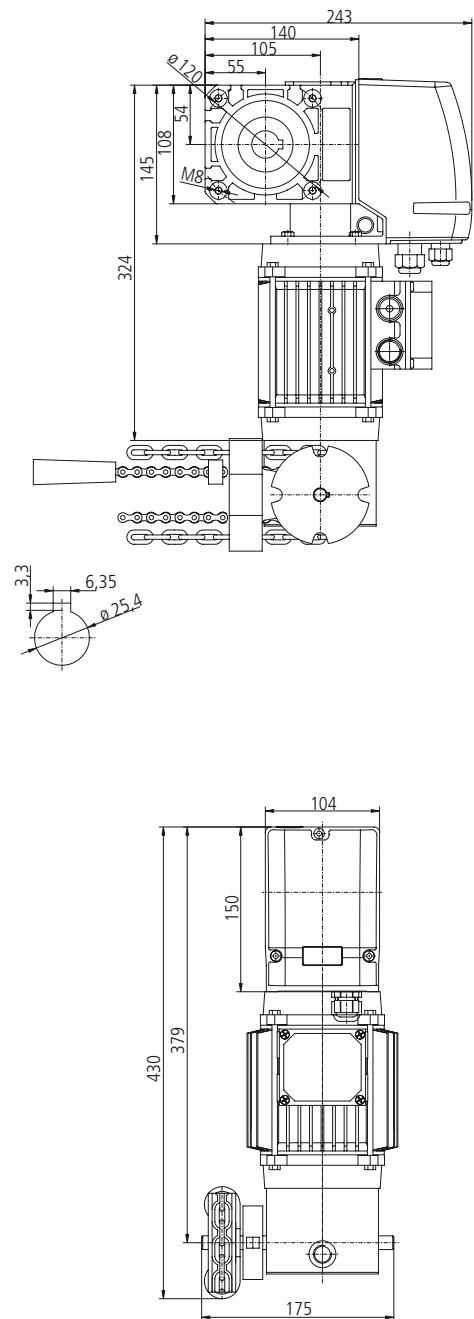
STA/STAW 1 KU

STA/STAW 1 E - 100% ED


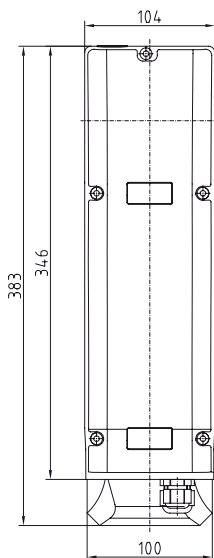
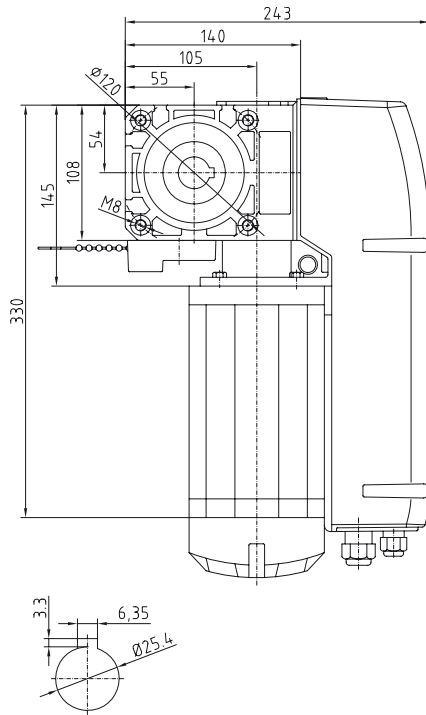
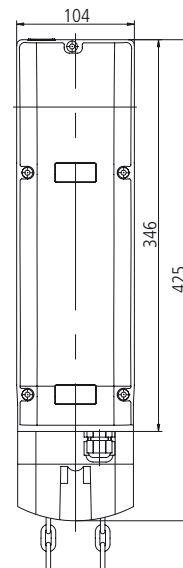
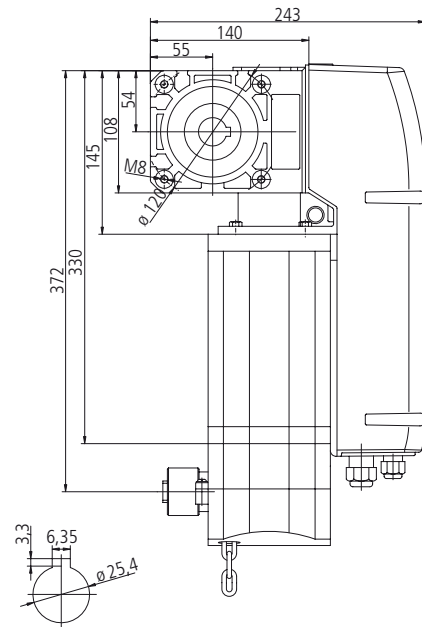
4. Overview of products

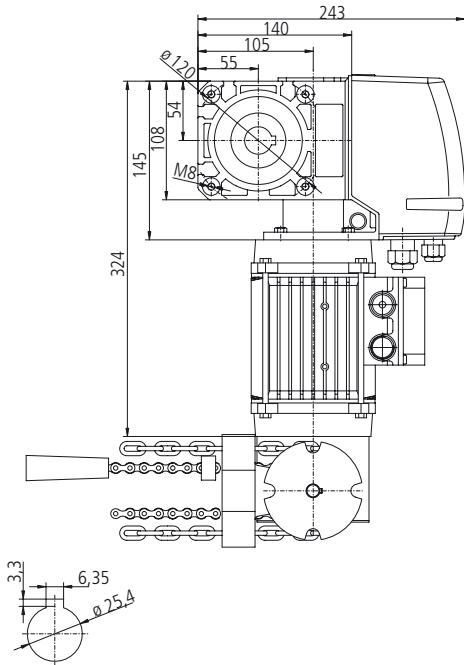STA/STAW 1 KE - 100% ED

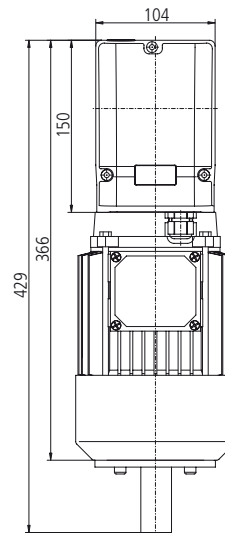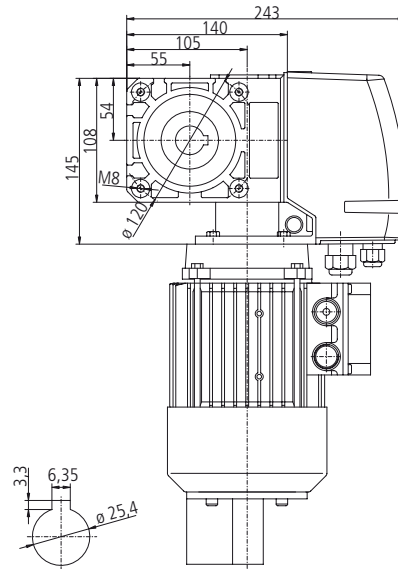


STA/STAW 1 KU - 100% ED



STAC 1 E

STAC 1 KE


4. Overview of products

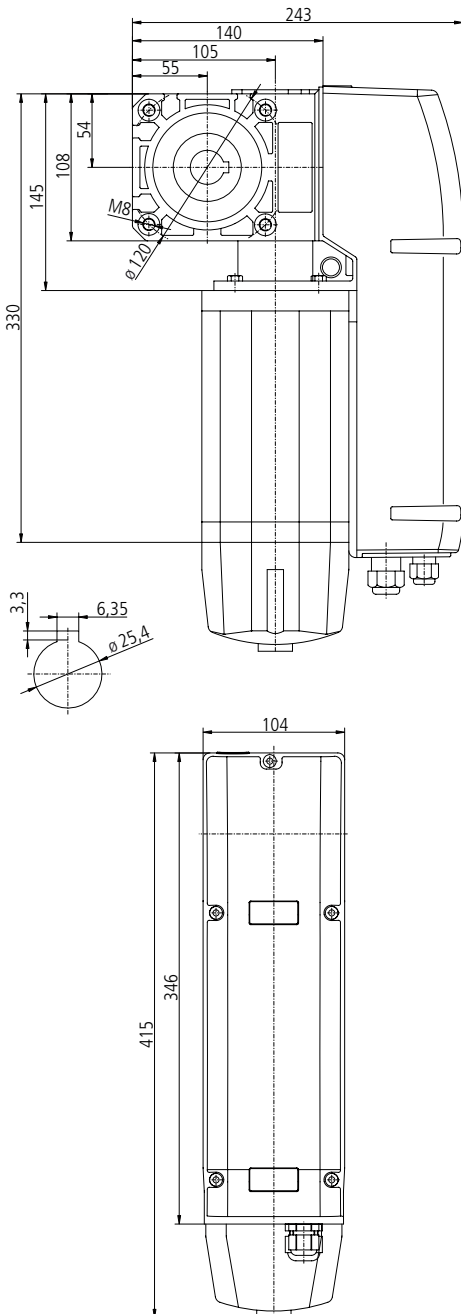STAC 1 KU



5. Installation

5.1 Preparation



Danger!

To avoid injury, the following points must be observed:

- The operator must be installed free of any tension.
- The operator must not move on the shaft.
- The design and subsurface of all components must be suitable for the forces encountered.



Warning!

To avoid damage to the operator and the door, the operator must only be fitted if


- the operator is undamaged,
- the ambient temperature is $-10\text{ }^{\circ}\text{C}$ to $+60\text{ }^{\circ}\text{C}$,
- the altitude of the location does not exceed 1,000 m,
- a suitable protection type has been selected.

☞ Before installation, ensure that

- the operator is not blocked,
- the operator has been newly prepared after a lengthy storage period,
- all connections have been carried out correctly,
- the direction of rotation of the drive motor is correct,
- all motor protective devices are active,
- no other sources of danger exist,
- the installation site has been cordoned off over a wide area.

5.2 Push-on assembly

Solid shaft

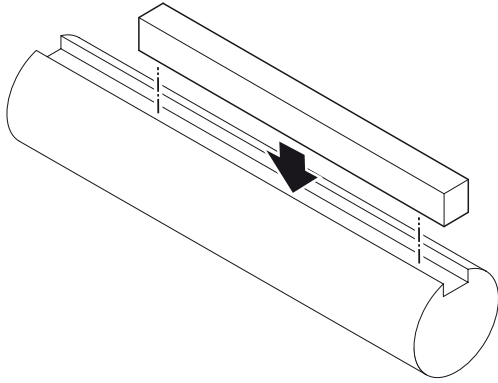


- ☞ Check whether the feather key is suitable for the spring shaft on site.

Mounting with torque support bracket



Warning!

To avoid damage to the operator and to the door, the operator must be mounted on a console or a torque support bracket so that it is vibration damped.

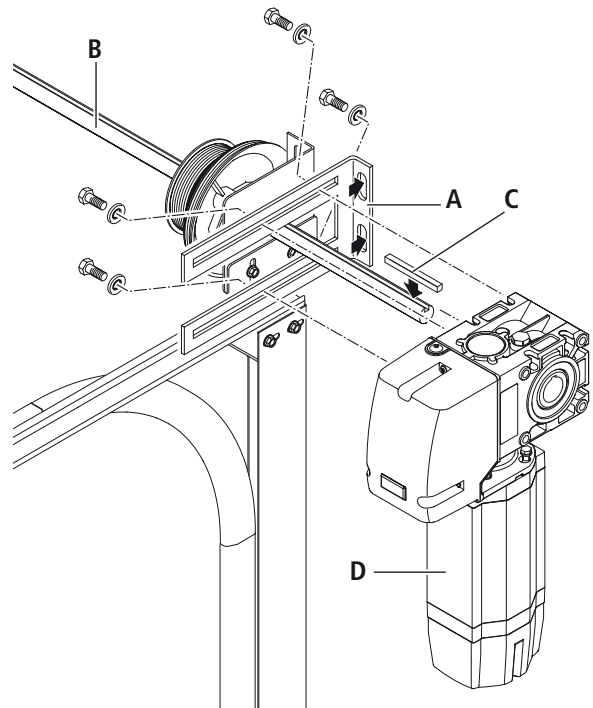

- ☞ Fit the torque support bracket/console (A).
- ☞ Grease the spring shaft (B) around the operator seating.
- ☞ Insert the feather key (C) into the spring shaft (B).
- ☞ Place the operator (D) on the spring shaft (B).
- ☞ Secure the feather key (C) against any movement.



Information:

The feather key can be secured with two hose clamps or adjusting rings.

- ☞ Fix the operator to the torque support bracket with 4 screws.


5. Installation

5.3 Installation of the emergency hand chain (only for operators with emergency hand chain)



Information:

To ensure that they work correctly, the chain links must not be twisted.

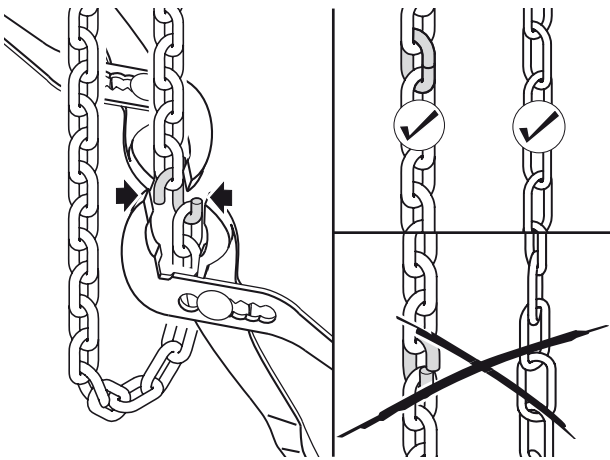

✎ Join the ends of the emergency hand chain together with the chain connecting link.



Warning!

To avoid damage to the operator and the door, the emergency hand chain must be secured while the door is operated electrically.

6. Initial Operation

6.1 Preparation



Warning!

To avoid damage to the operator, the following points must be observed:

- The types of cable and their diameters must be selected according to current regulations.
- The nominal currents and the type of connection must correspond to those on the motor type plate.
- The drive details must agree with the connected loads.



Information:

When operated with electronic control units, the corresponding start-up instructions and circuit diagrams must be complied with.


6.2 Connection

Open the operator




Danger!

To avoid injury, the system must be disconnected from the power supply during the cabling work. The system must be safeguarded against being unintentionally switched on again during the work.

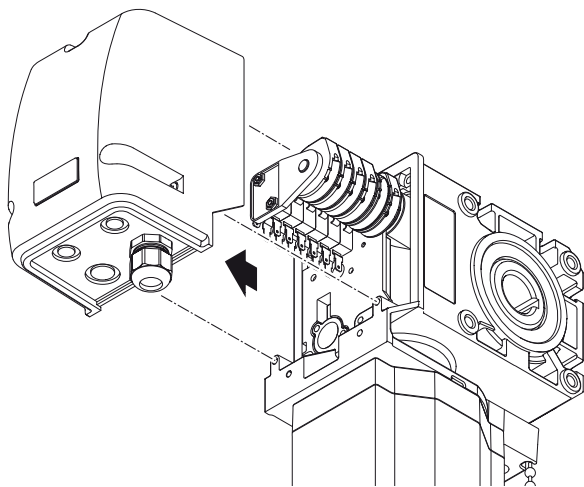


☞ Remove the cover from the operator.

Insert the cables

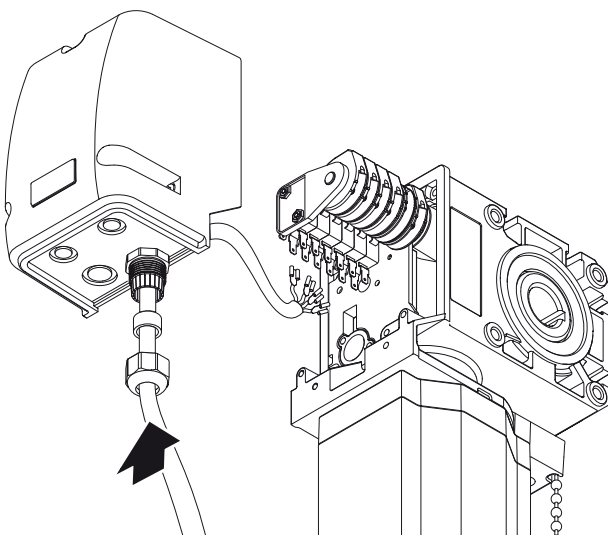


☞ Feed the cables through the screw fitting into the operator.

3 x 400 V star connection (standard)

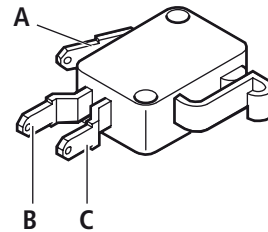

- A Terminal 1
- B Terminal 4
- C Terminal 2


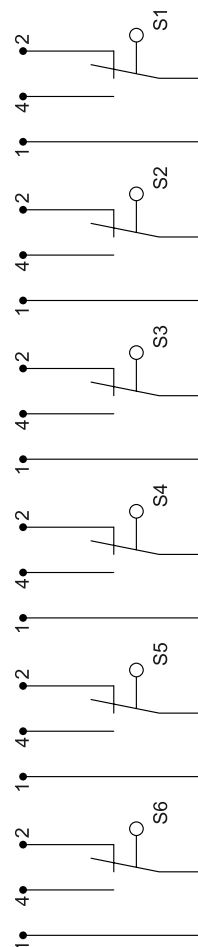


- S1 OPEN additional limit switch (standard only in the case of operators without integrated control unit)
- S2 Limit switch, OPEN
- S3 Safety limit switch, OPEN
- S4 Safety limit switch, CLOSE
- S5 Limit switch CLOSED
- S6 CLOSED additional limit switch (standard only in the case of operators without integrated control unit)

6. Initial Operation

3 x 400 V star connection (pluggable)

The motor is factory-wired for connection to a 3 x 400 V mains supply in star connection.

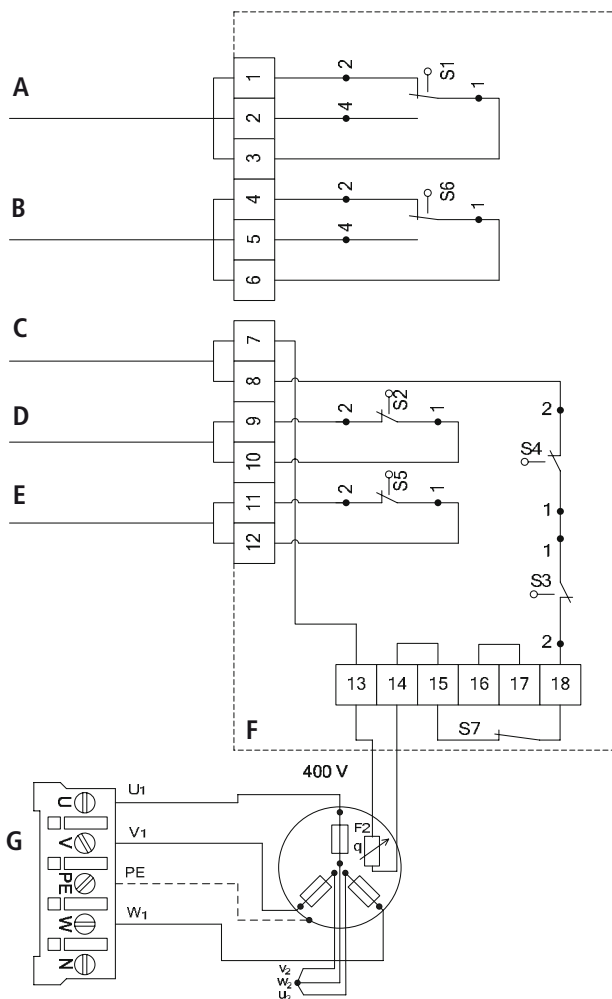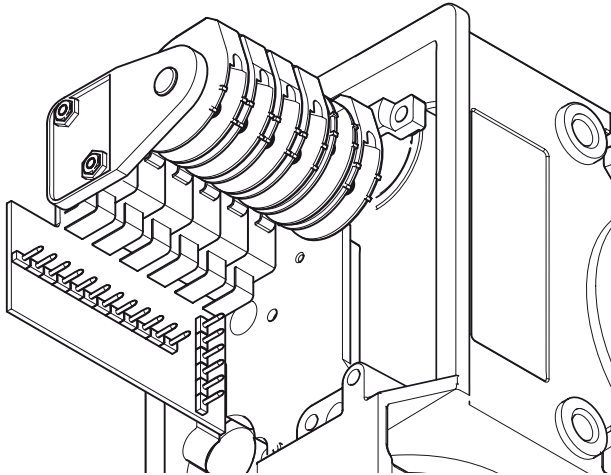

 Connect all the cables required.


Identification of wires

U1	Red
V1	Blue
W1	White
V2	Black
W2	Brown
U2	Green
A	Potential-free connection OPEN
B	Potential-free connection CLOSE
C	Switch off safety circuit
D	Switch off OPEN end position
E	Switch off CLOSED end position
F	Internal safety circuit
G	Operator
S1	Additional limit switch, OPEN (standard only for operators without integrated control unit)
S2	Limit switch, OPEN
S3	Safety limit switch, OPEN
S4	Safety limit switch, CLOSED
S5	Limit switch, CLOSED
S6	Additional limit switch, CLOSED (standard only for operators without integrated control unit)
S7	Safety limit switch for emergency manual operation
F2	Thermal overload protection for motor


3 x 230 V delta connection

To connect the operator to a 3 x 230 V mains supply, please consult the manufacturer.

6.3 Manual settings

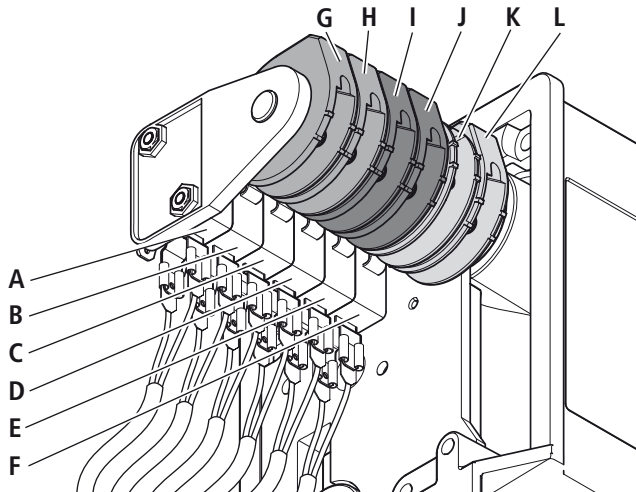

- A OPEN additional limit switch - S1
(potential-free change-over contact)
- B Limit switch, OPEN - S2
- C Safety limit switch, OPEN - S3
- D Safety limit switch, CLOSED - S4
- E Limit switch, CLOSED - S5
- F Additional limit switch, CLOSED - S6
(potential-free change-over contact)
- G Control cam for additional limit switch, OPEN (green)
- H Control cam for limit switch, OPEN (green)
- I Control cam for safety limit switch, OPEN (red)
- J Control cam for safety limit switch, CLOSED (red)
- K Control cam for limit switch, CLOSED (white)
- L Control cam for additional limit switch, CLOSED
(white)

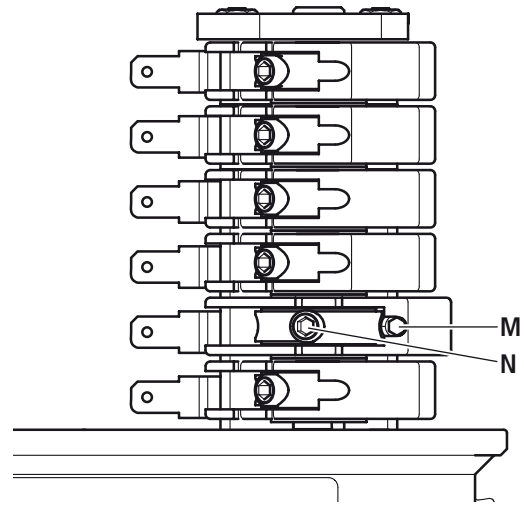

- M Fine adjustment screw
- N Locking screw

Each control cam has a locking screw (M) and a fine adjustment screw (N).

The locking screw (M) is used to lock the corresponding control cam in the desired position. Finer adjustment can be made with the fine adjustment screw (N).

Set the CLOSED end position

- Drive the door to the CLOSED end position.
- Set the control cam (K) so that the CLOSED limit switch (E) is actuated.
- Tighten the locking screw (N).

The CLOSED safety limit switch (D) must be set in such a way that it switches immediately when the CLOSED limit switch (E) is passed over.

- Adjust the CLOSED safety limit switch (D).

6. Initial Operation

Set the OPEN end position


- Drive the door to the OPEN end position.
- Set the control cam (H) so that the OPEN limit switch (B) is actuated.
- Tighten the locking screw (N).

The OPEN safety limit switch (C) must be set in such a way that it switches immediately when the OPEN limit switch (B) is passed over.

- Adjust the OPEN safety limit switch (C).

6.4 Digital settings – Limit switch and safety circuit for drive

Electronic interface

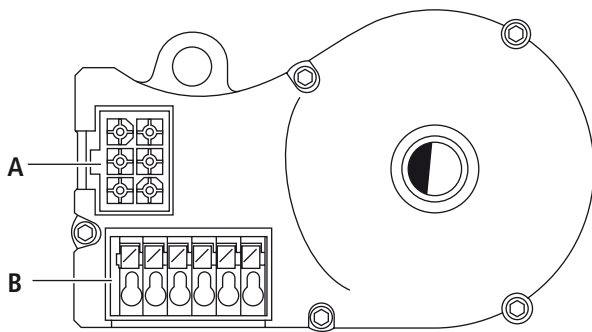

- A: AVE plug (absolute value encoder plug)
- B: AVE plug terminal (absolute value encoder plug terminal)




Information:

Please refer to the control unit operating manual for instructions on setting the end positions.

Wiring allocation,


AVE (absolute value encoder) plug

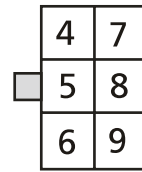

The numbers on the plug are also the wire-numbers.

- 4: Safety circuit input
- 5: RS 485 B
- 6: GND
- 7: RS485 A
- 8: Safety circuit output
- 9: 7...18V_{DC}

AVE (absolute value encoder) plug terminal (7-12)

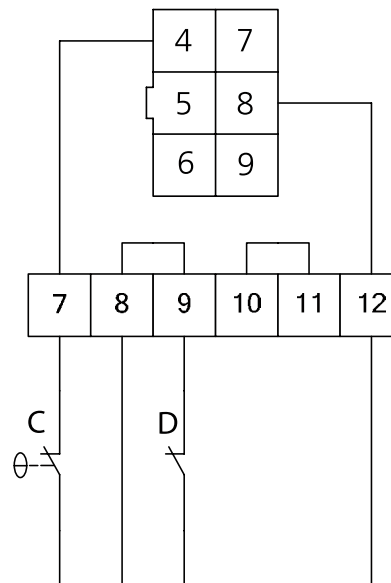

- C: Thermal element in the drive
- D: Manual emergency control (emergency crank or emergency chain)

6.5 Check the system

Check the direction of travel

☞ Drive the door in the CLOSED direction.
The operator must close the door.

☞ Drive the door in the OPEN direction.
The operator must open the door.



Information:

*If the direction of travel of the door does not correspond to the commands keyed in, then the direction of rotation must be changed. Instructions for changing the direction of rotation are given in the control unit operating manual.
After this the direction of travel must be checked again.*

Check the limit switch settings

☞ Drive the door to the CLOSED end position.
The operator must stop in the desired position.

☞ Drive the door to the OPEN end position.
The operator must stop in the desired position.

☞ Check the seat of the fixing screws.

Check the mechanical functions

After assembling and installing all components the functions of the system must be checked.

- ☞ Check all the functions of the system.
- ☞ Check that the operator runs smoothly.
- ☞ Check whether the operator is leaking oil.

If the operator makes unusual noises or leaks oil:

- The operator must be taken out of service immediately,
- The customer service must be informed.



Danger!

To avoid injury, the following points must be observed:

- *Emergency operation may only be carried out from a safe standing position.*
- *Emergency operation may only be carried out when the motor is stationary.*
- *The system must be disconnected from the power supply during emergency operation.*


During maintenance works or in the case of an electrical fault, the door can be moved towards the OPEN or CLOSED positions with the help of the emergency operation equipment.



Information:

If the door is moved beyond the CLOSED or OPEN end positions, the operator can no longer be activated electrically.


Operation with emergency hand chain

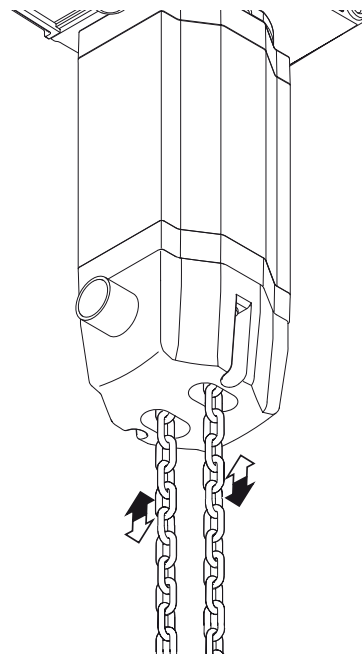

- ☞ Release the emergency hand chain from its fixing.
- ☞ Move the door in the OPEN or CLOSE direction by pulling on the emergency hand chain on the side concerned.


7. Emergency operation

Operation with emergency hand crank

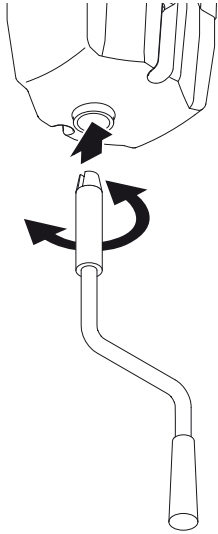

- ☞ Push the emergency hand crank into the operator as far as it will go.
- ☞ Move the door in the OPEN or CLOSE direction by turning the emergency hand crank.
- ☞ Remove the emergency hand crank from the operator after completing emergency manual operation.

Operation with release mechanism

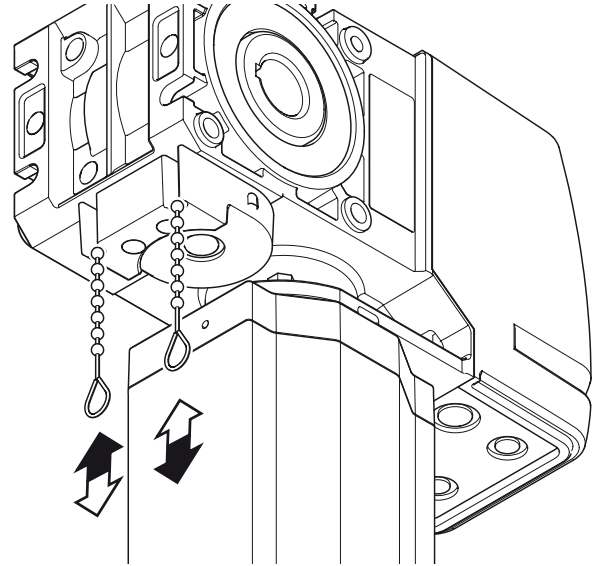

- ☞ Pull on the red loop.
The gate can be moved manually.
- ☞ Pull on the green loop.
The door can be moved with the operator.



Warning!

In the case of drive units with a release mechanism, a fall protection must be mounted on the door so that the door complies with directive BGR 232.

8. Maintenance

**Warning!**

To avoid damage to the operator and door, the following points must be observed:

- Maintenance must only be carried out by authorized persons.
 - Directive BGR 232 must be complied with.
 - Worn or faulty parts must be replaced.
 - Only approved parts may be installed.
- All maintenance work must be documented.

**Information:**

The drive unit has lifetime lubrication and is maintenance-free.

- ☞ Check that all mountings have been securely tightened.
- ☞ Check the spring tension on the door.
The springs must be adjusted so that they are weight counter-balanced.
- ☞ Check the brake (if available).
- ☞ Check the limit switches and safety switches.
- ☞ Check for noises and oil leaks.
- ☞ Check the mounting of the operator for corrosion.
- ☞ Check the housing for damage.

9. TECHNICAL DATA

Typ (E/KU/KE)	STA 1-11-19	STA 1-10-24	STA 1-13-15	STA 1-12-19	STA 1-11-24	STA 1-10-30
Driving Torque (Nm)	110	100	130	120	110	100
Maximum safety catch torque (Nm)	-	-	-	-	-	-
Permissible torque (Nm)	-	-	-	-	-	-
Driving motor speed (min ⁻¹)	19	24	15	19	24	30
Motor output (kW)	0,37	0,37	0,55	0,55	0,55	0,55
Operating voltage (V)	400 / 3~	400 / 3~	400 / 3~	400 / 3~	400 / 3~	400 / 3~
Mains frequency (Hz)	50	50	50	50	50	50
Control voltage (V)	24	24	24	24	24	24
Nominal motor current (A)	1,85	2,1	2,4	2,4	3,0	3,0
Motor duty cycle (%)	60	60	60	60	60	60
Cable on site (mm ²)	5G1,5	5G1,5	5G1,5	5G1,5	5G1,5	5G1,5
Fuse protection on site (A)	10	10	10	10	10	10
Protection type (IP)	54	54	54	54	54	54
Temperature range (°C)	-10 / +60	-10 / +60	-10 / +60	-10 / +60	-10 / +60	-10 / +60
Continous sound pressure level (dB (A))	<70	<70	<70	<70	<70	<70
Weight per piece (kg)	13 / 13 / 15	13 / 13 / 15	13 / 13 / 15	13 / 13 / 15	13 / 13 / 15	13 / 13 / 15
Max number of revolutions of driven shaft	13	13	13	13	13	13
Hollow shaft (mm)	25,4	25,4	25,4 / 31,75	25,4 / 31,75	25,4 / 31,75	25,4 / 31,75

Type (E / KU / KE):	STA 1 13-15 100%	STA 1 12-19 100%	STA 1 11-24 100%	STA 1 10-30 100%	STAW 1 7-19
Driving torque (Nm):	130	120	110	100	70
Maximum safety catch torque (Nm):	-	-	-	-	-
Permissible torque (Nm):	-	-	-	-	-
Driving motor speed (min -1):	15	19	24	30	19
Motor output (kw):	0,55	0,55	0,55	0,55	0,37
Operating voltage (V):	400 / 3~	400 / 3~	400 / 3~	400 / 3~	230 / 1~
Mains frequency Hz:	50	50	50	50	50
Control voltage: (V):	24	24	24	24	24
Nominal motor current (A):	2,4	1,8	1,75	1,5	4,8
Motor duty cycle (%):	100	100	100	100	25
Cable on site (mm ²):	5 x 1,5	5 x 1,5	5 x 1,5	5 x 1,5	3 x 1,5
Fuse protection on site (A):	10,0	10,0	10,0	10,0	10,0
Protection type (IP)	54	54	54	54	54
Temperature range (°C):	-10 / +60	-10 / +60	-10 / +60	-10 / +60	-10 / +60
Continuous sound pressure level (dB (A)):	< 70	< 70	< 70	< 70	-
Weight per piece (kg):	18 / 18 / 23	18 / 18 / 23	18 / 18 / 23	18 / 18 / 23	13 / 13 / 15
Maximum number of revolutions of driven shaft:	13	13	13	13	13
Hollow shaft (mm):	25,4 / 31,75	25,4 / 31,75	25,4 / 31,75	25,4 / 31,75	25,4

9. Technical data

Type (E / KU / KE):	STAC 1 11-19	STAC 1 10-24	STAC 1 13-15	STAC 1 12-19
Driving torque (Nm):	110	100	130	120
Maximum safety catch torque (Nm):	-	-	-	-
Permissible torque (Nm):	-	-	-	-
Driving motor speed (min ⁻¹):	19	24	15	19
Motor output (kw):	0,37	0,37	0,55	0,55
Operating voltage (V):	400 / 3~	400 / 3~	400 / 3~	400 / 3~
Mains frequency Hz:	50	50	50	50
Control voltage (V):	24	24	24	24
Nominal motor current (A):	1,85	2,1	2,4	2,4
Motor duty cycle (%):	60	60	60	60
Cable on site (mm ²):	5 x 1,5	5 x 1,5	5 x 1,5	5 x 1,5
Fuse protection on site (A):	10,0	10,0	10,0	10,0
Protection type (IP)	54	54	54	54
Temperature range (°C):	-10 / +60	-10 / +60	-10 / +60	-10 / +60
Continuous sound pressure level (dB (A)):	< 70	< 70	< 70	< 70
Weight per piece (kg):	13 / 13 / 15	13 / 13 / 15	13 / 13 / 15	13 / 13 / 15
Maximum number of revolutions of driven shaft:	13	13	13	13
Hollow shaft (mm):	25,4	25,4	25,4 / 31,75	25,4 / 31,75

10. EU Declaration of Conformity

GB

Manufacturer:

Ovitor Oy, Sienitie 24, 00760 Helsinki, Finland

We hereby declare that, by virtue of their conceptual development and design, as well as their manufacture as we have brought them onto the market, the products cited below:

Sectional door operator STA1

conform to the relevant basic health and safety regulations of the following EU guidelines and standards:

EU Construction Products Directive 89/106/EU

DIN EN 13241-1
DIN EN 12453
DIN EN 12445
DIN EN 12978

EU Electromagnetic Compatibility Directive 89/336/EU

EN 55014-1
EN 61000-3-2
EN 61000-3-3
EN 61000-6-2
EN 61000-6-3

EU Machinery Directive 98/37/EU

EN 60204-1
EN ISO 12100-1

EU Low Voltage Directive 73/23/EU

EN 60335-1
EN 60335-2-103

BGR 232 - Directive for Power-driven Windows, Doors and Gates Directive for Power-driven Windows, Doors and Gates

Legden, 2 January 2007
Manufacturer's signature:



Position of signatory:
Manager

